


Med styrenhet och batteri-  
värmeväxlare/With control  
unit and coil heat exch.

The sketch shows control unit for AHU with left-hand inspection, control unit for AHU with right-hand inspection looks slightly different, but the principle is the same.

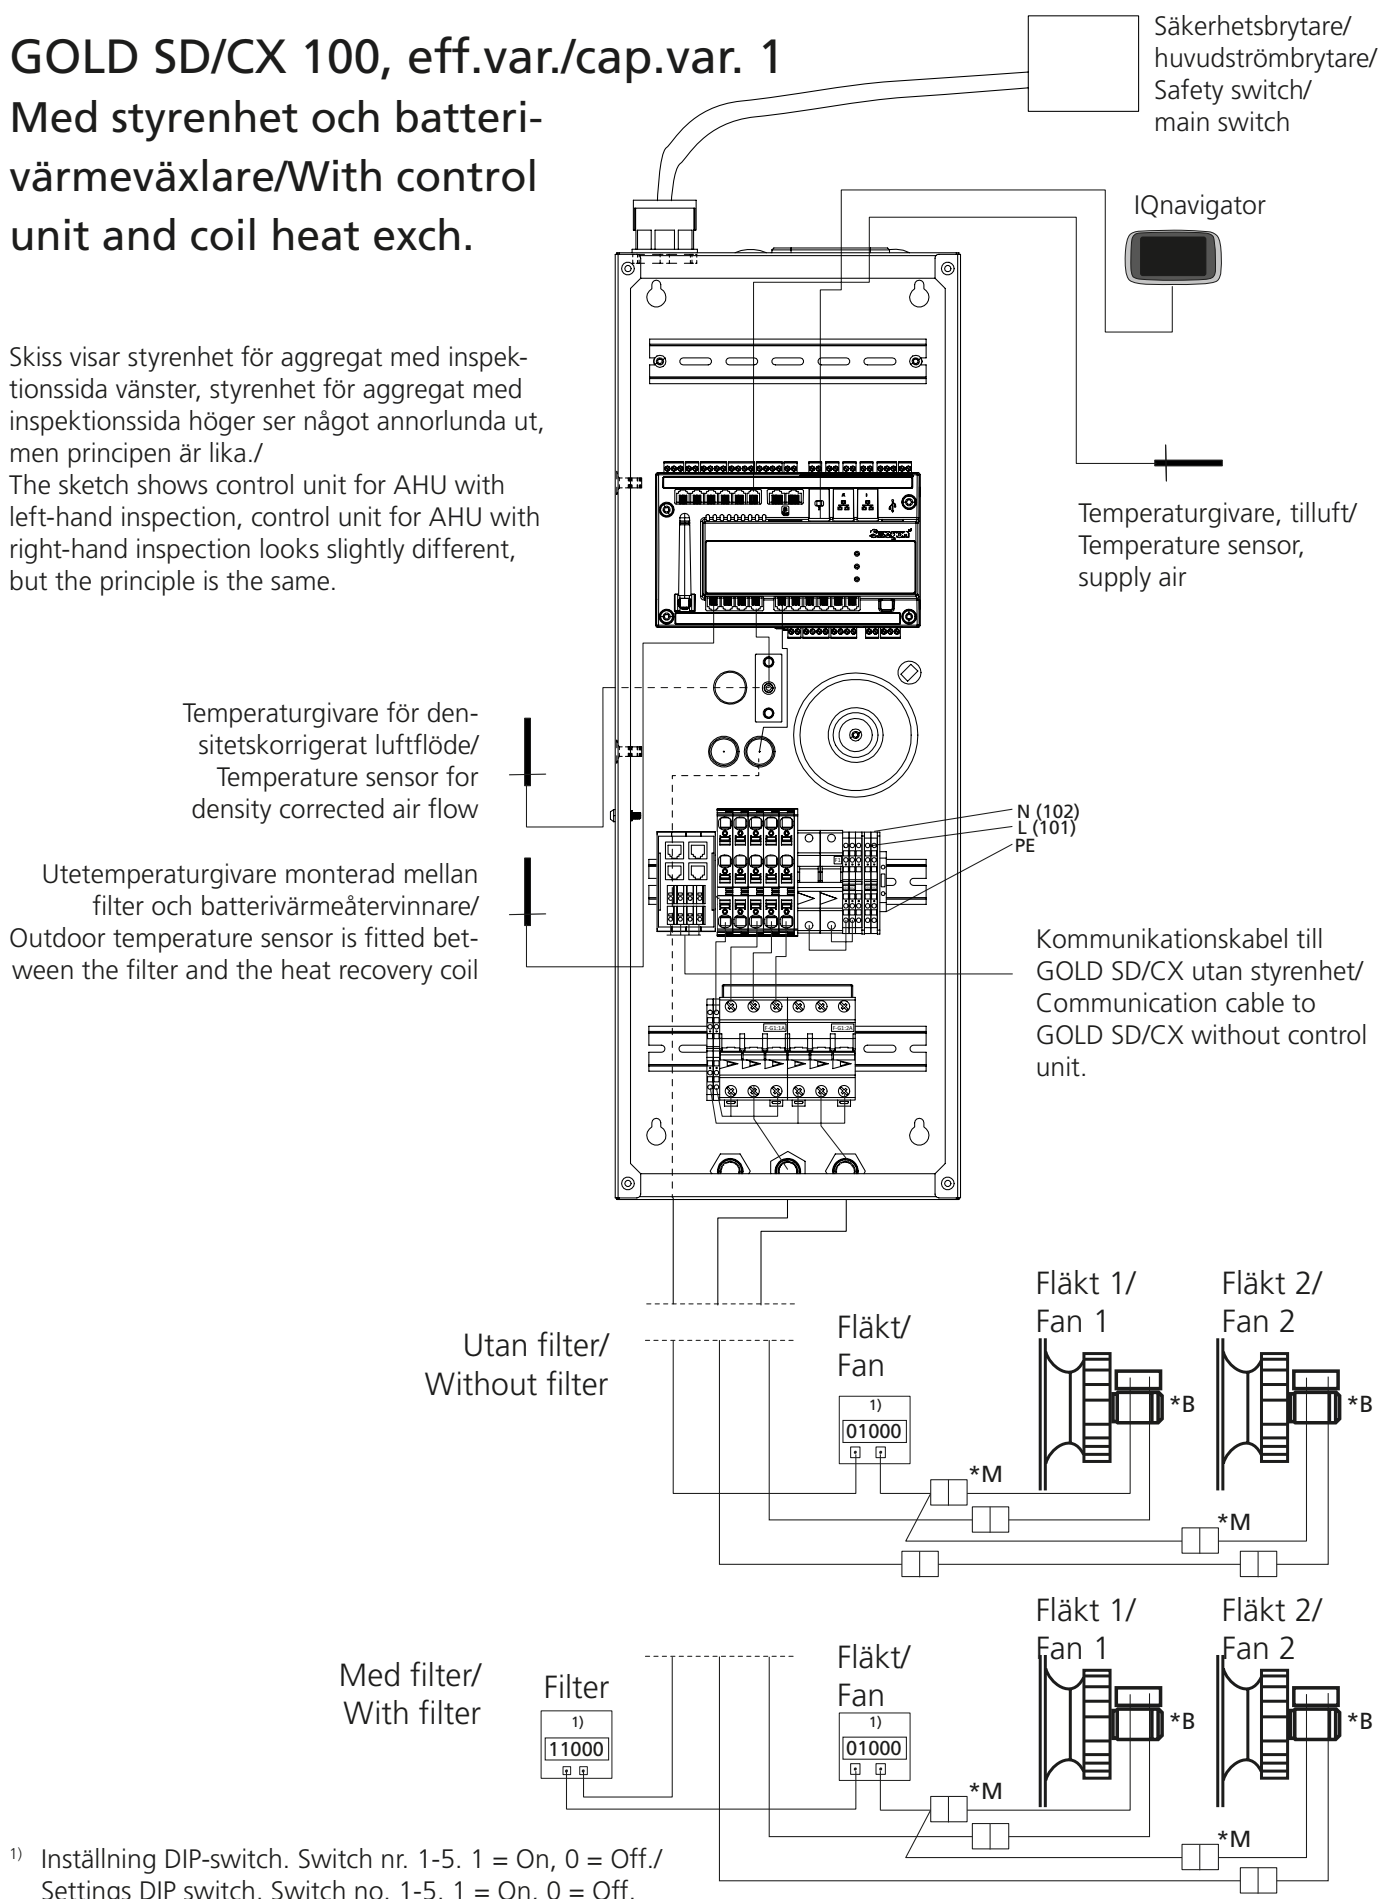


<sup>1)</sup> Inställning DIP-switch. Switch nr. 1-5. 1 = On, 0 = Off./  
Settings DIP switch. Switch no. 1-5. 1 = On, 0 = Off.

# GOLD SD/CX 100, eff.var./cap.var. 1

 Utan styrenhet, med batteri-  
värmeväxlare/Without control  
unit, with coil heat exch.

Säkerhetsbrytare/  
huvudströmbrytare/  
Safety switch/  
main switch



Fukt-/temperaturgivare för från-  
luft monterad mellan filter och  
batteri-  
värmeväxlare/  
Exhaust air humidity/tempera-  
ture sensor is fitted between the  
filter and the heat recovery coil

 
Temperaturgivare för  
densitetskorrigerat  
luftflöde./  
Temperature sensor  
for density-corrected  
airflow.

Kommunikationskabel till  
GOLD SD/CX med styrenhet/  
Communication cable to GOLD  
SD/CX with control unit

<sup>1)</sup> Inställning DIP-switch. Switch nr. 1-5.  
1 = On, 0 = Off./  
Settings DIP switch. Switch no. 1-5.  
1 = On, 0 = Off.



Utan filter/  
Without filter

Med filter/  
With filter





Fläkt 1/  
Fan 1

Fläkt 2/  
Fan 2

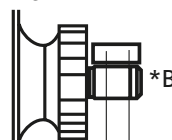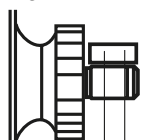

Fläkt 1/  
Fan 1


Fläkt 2/  
Fan 2

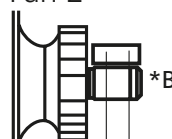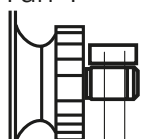


# GOLD SD 100, eff.var./cap.var. 1

## Sammankoppling av aggregat med styrenhet till aggregat utan styrenhet/ Connecting AHU with control unit to AHU without control unit


## Connecting AHU with control unit to AHU without control unit

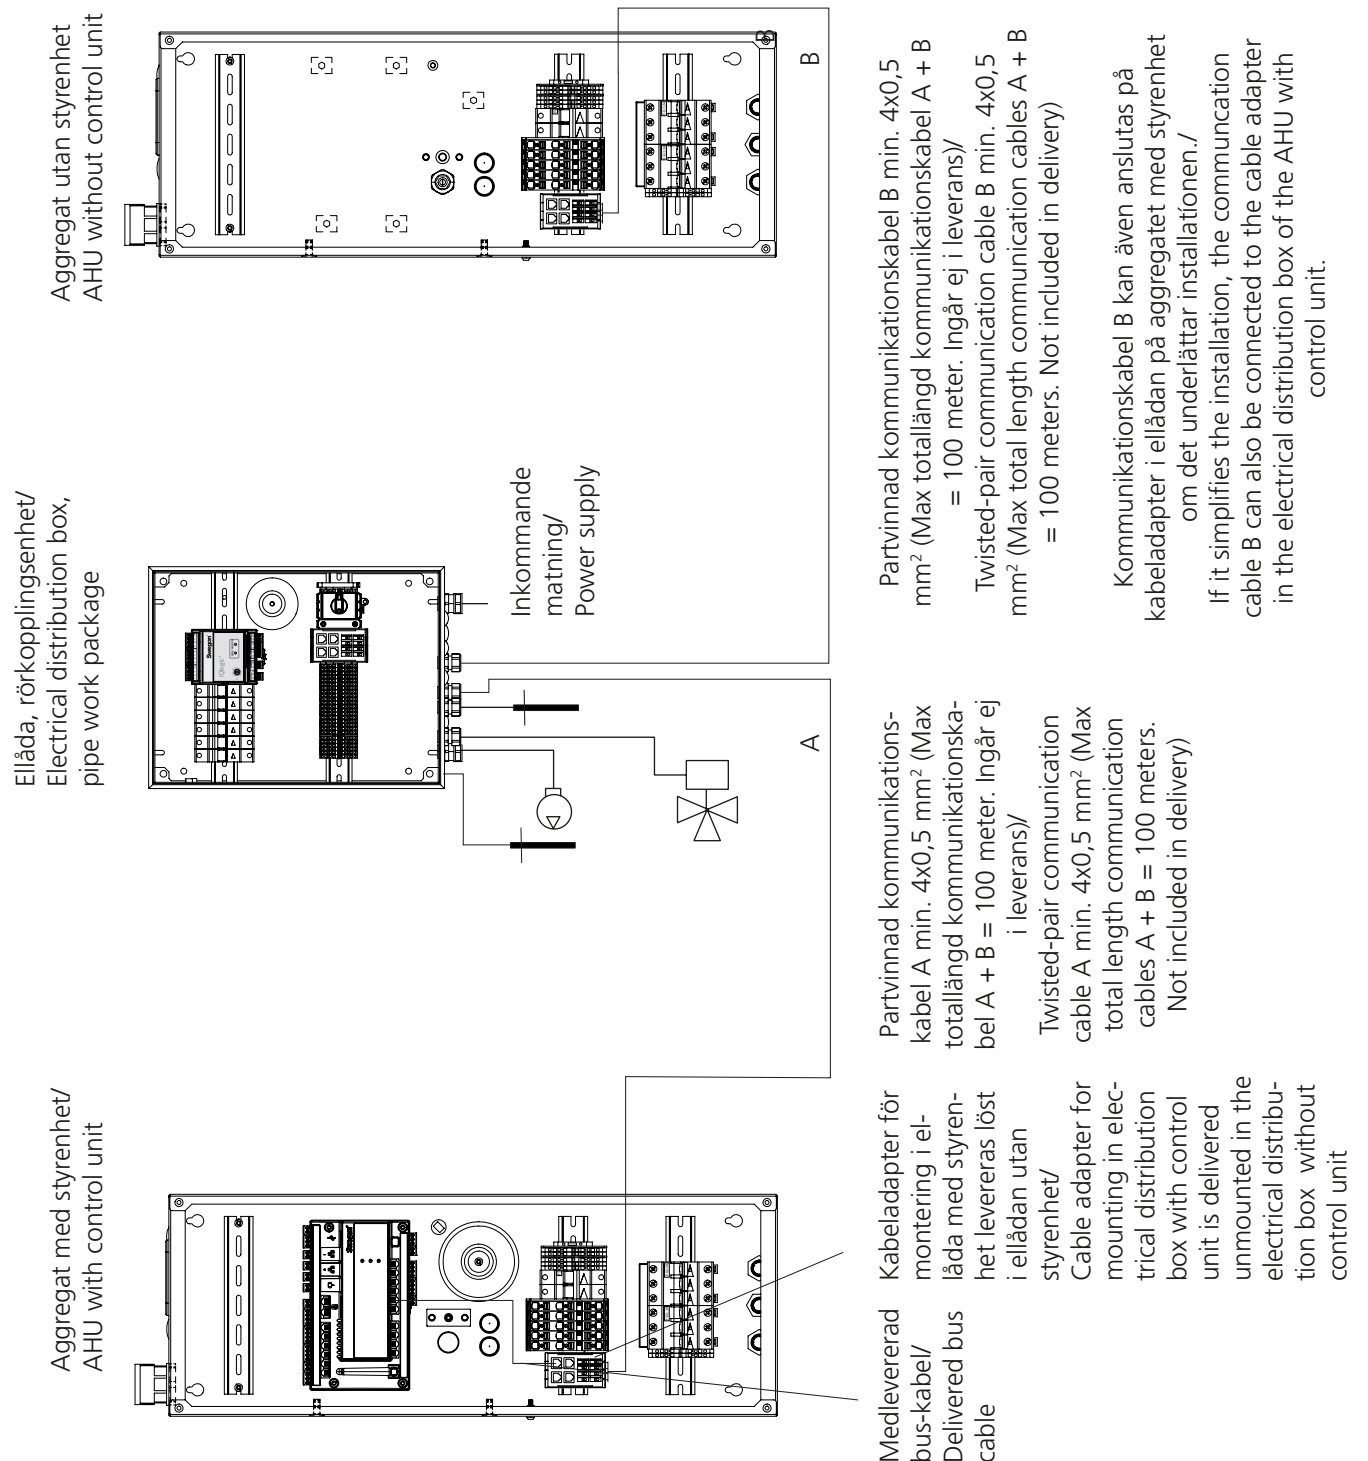


**B:**  
**Alt. 1: GOLD RX/PX/CX/SD14-120**

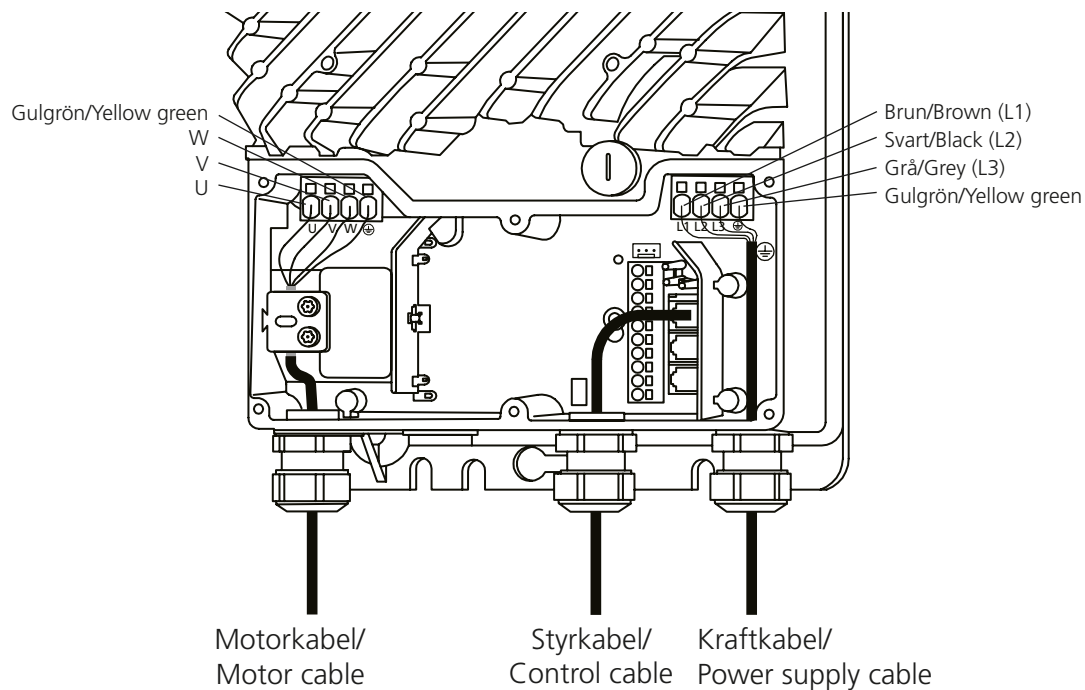

**Alt. 2: GOLD RX/PX/CX/SD14-120**

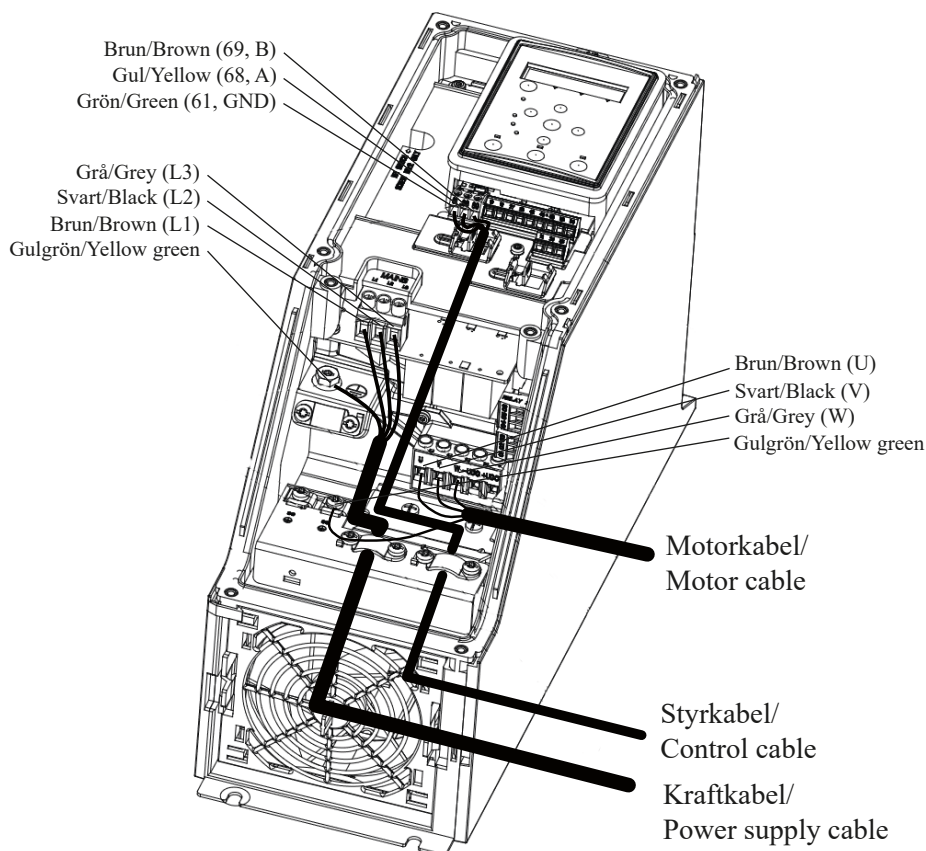

## L: GOLD RX/PX/CX/SD 50-100

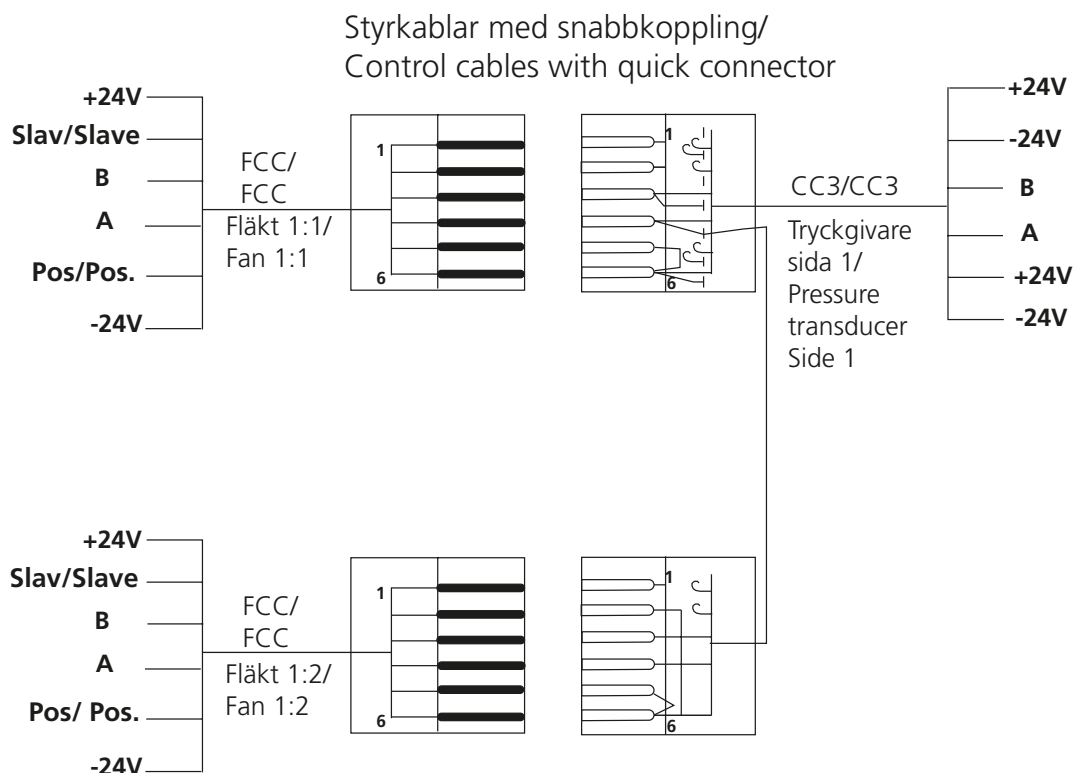

## M: GOLD RX/PX/CX/SD 50-100

