

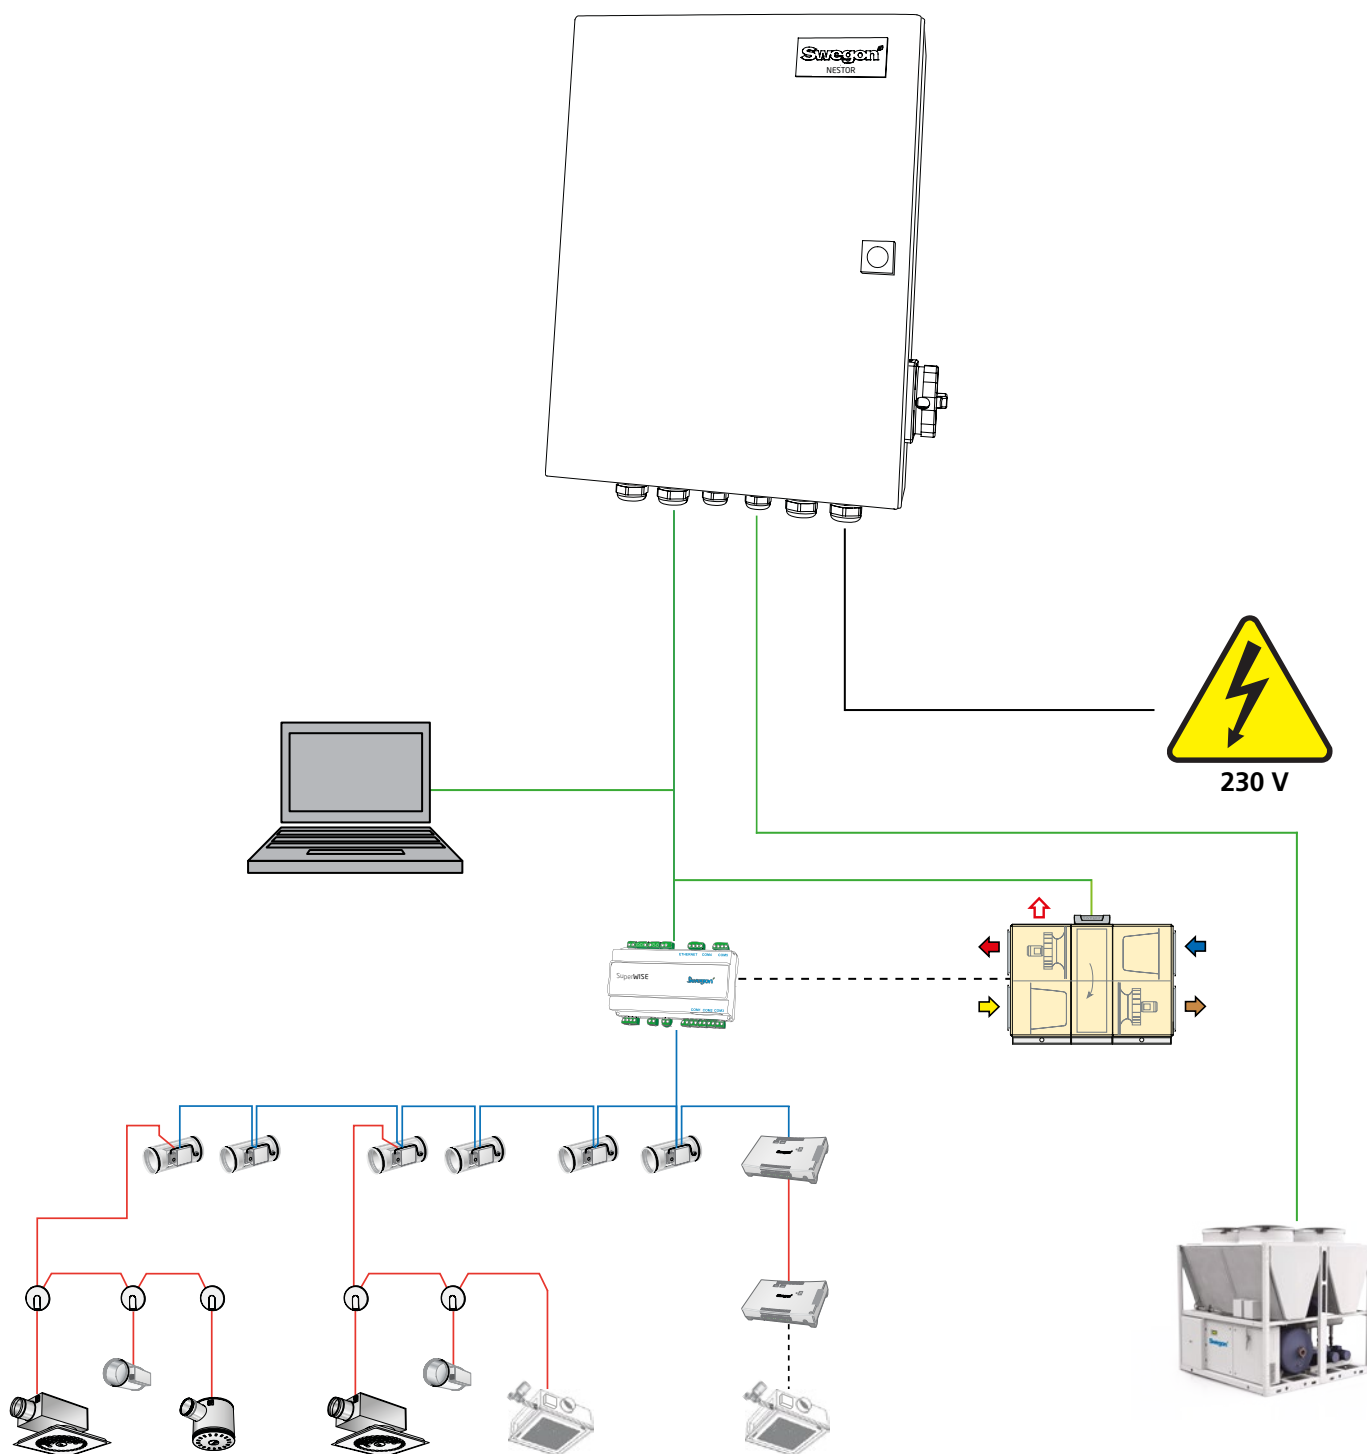



NESTOR

Installation instructions


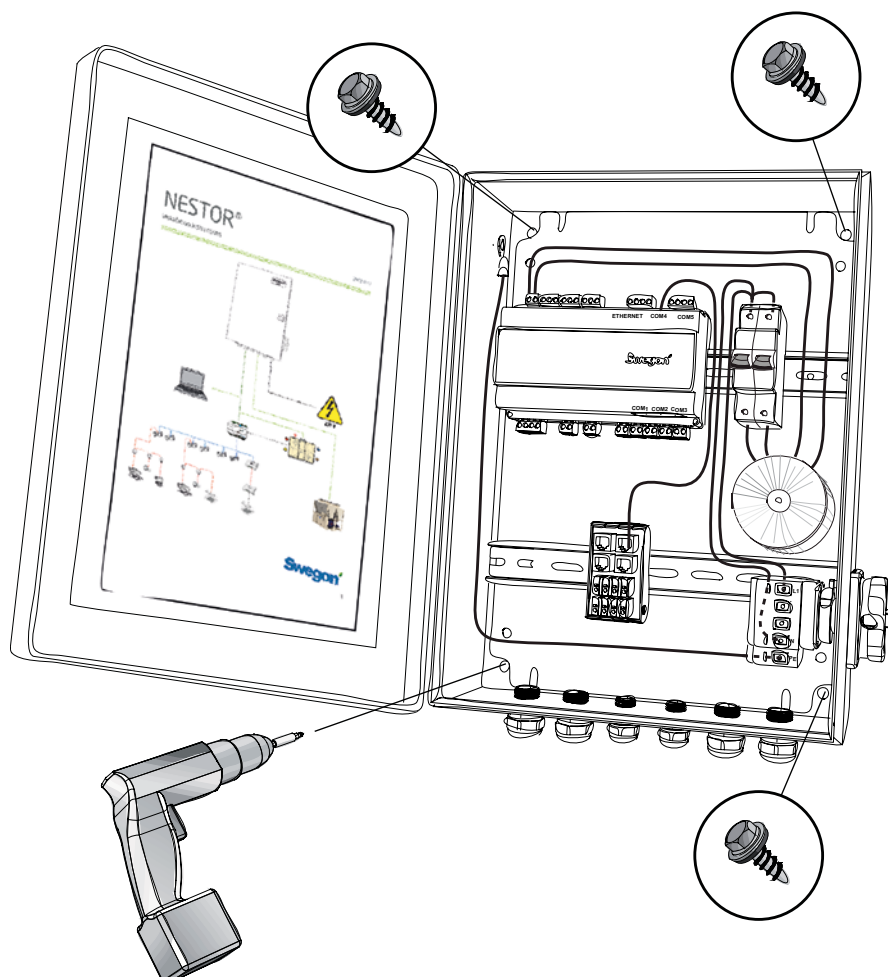


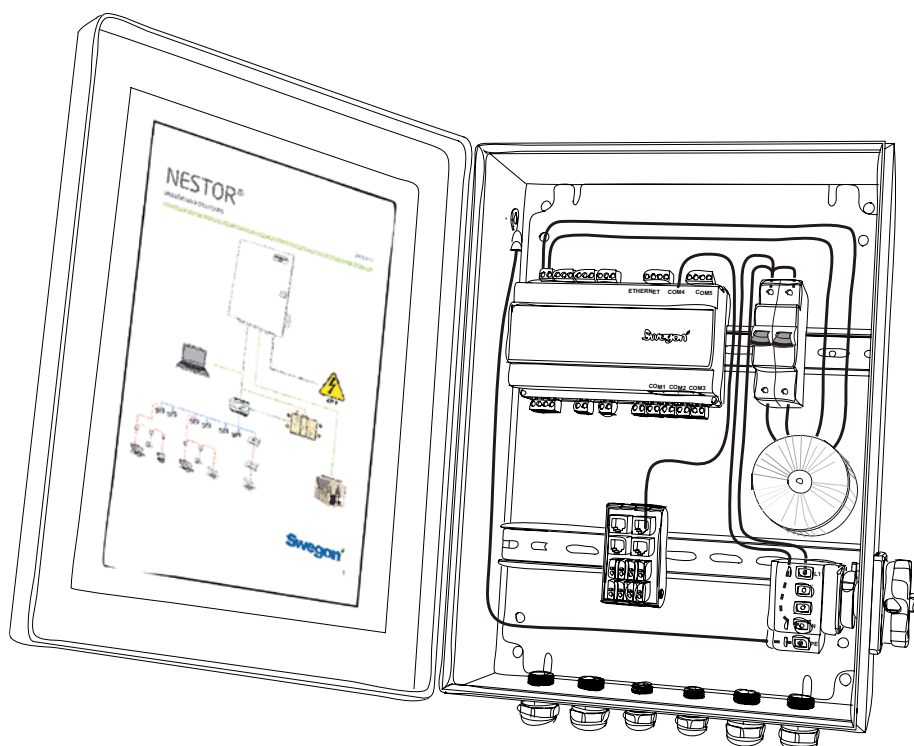

3 Connection to SMART Link (CHILLER/HEAT PUMP) /AQUA Link


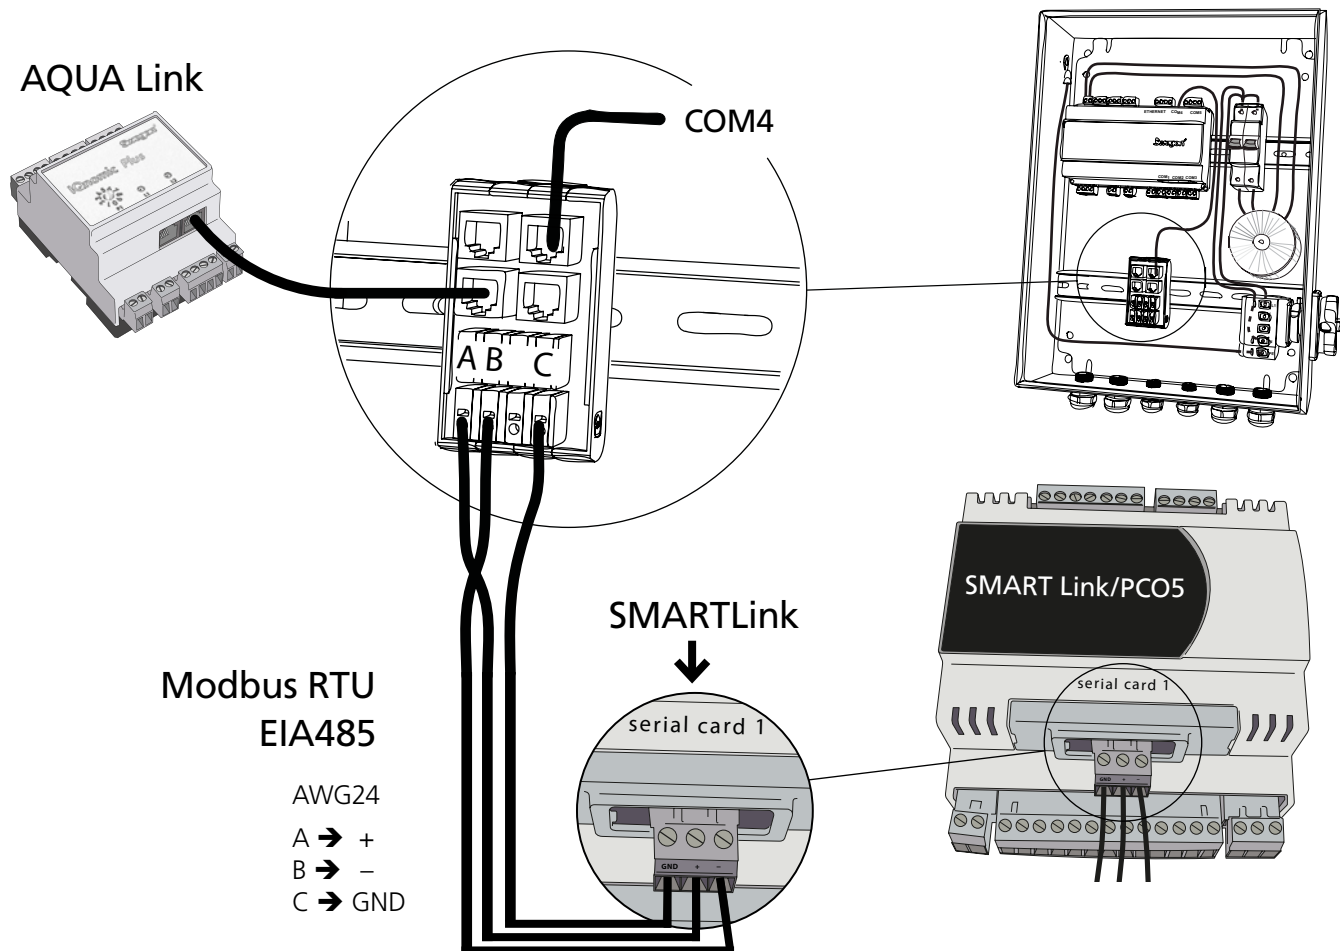


4 Connection via internal SMART Link communication interface

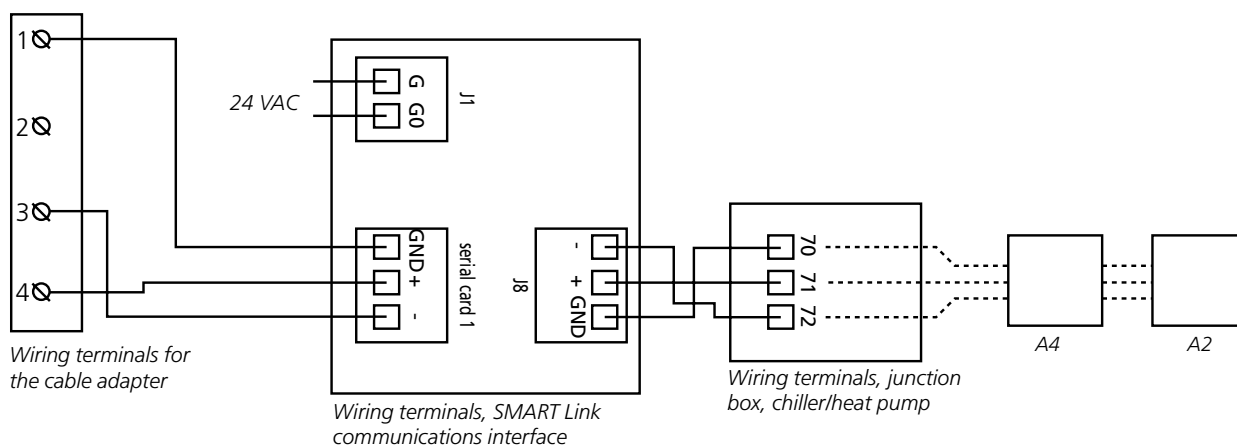
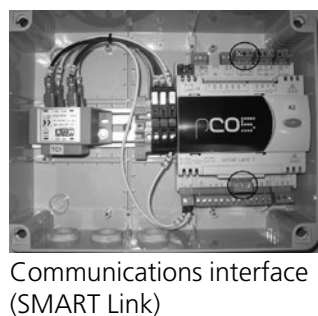


----- Cable connected at the factory

5 Connection via built-in SMART Link communications interface

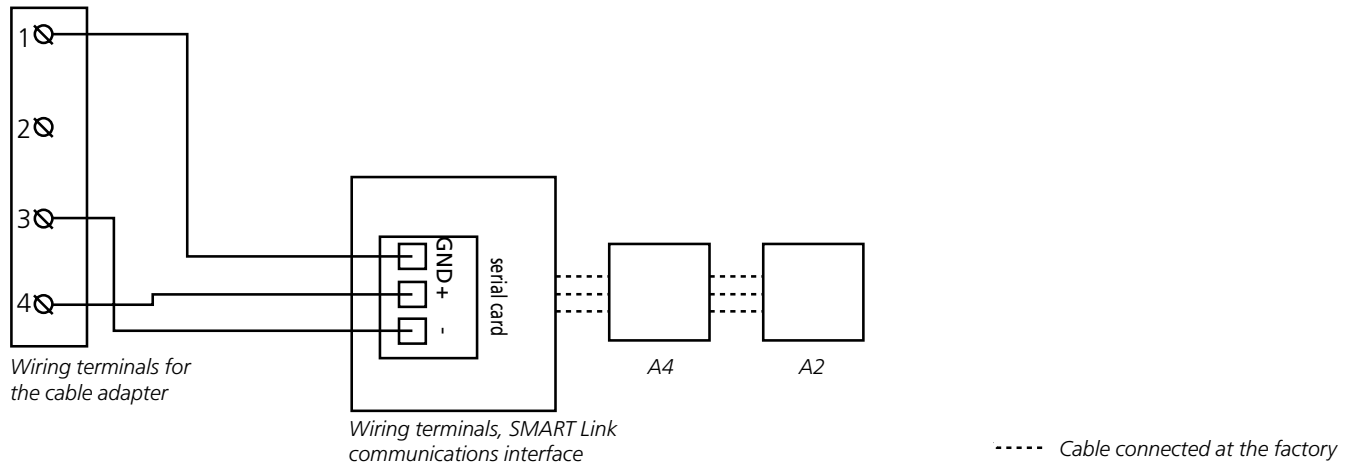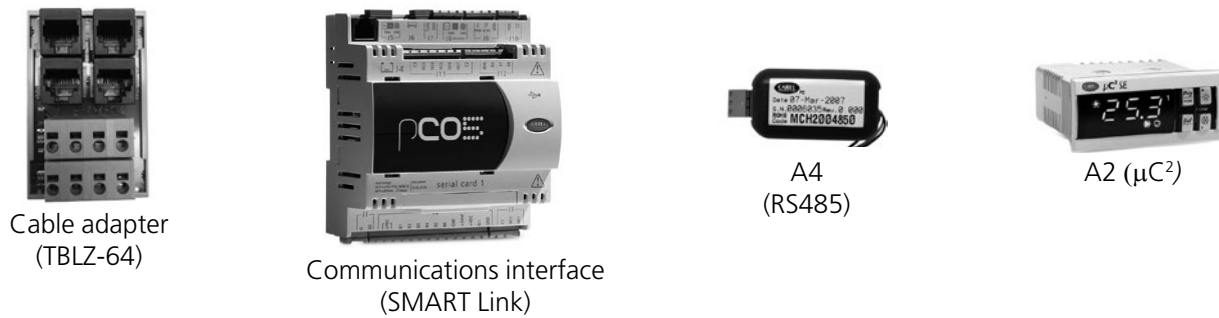


6 Connection via internal iPro-link communications interface

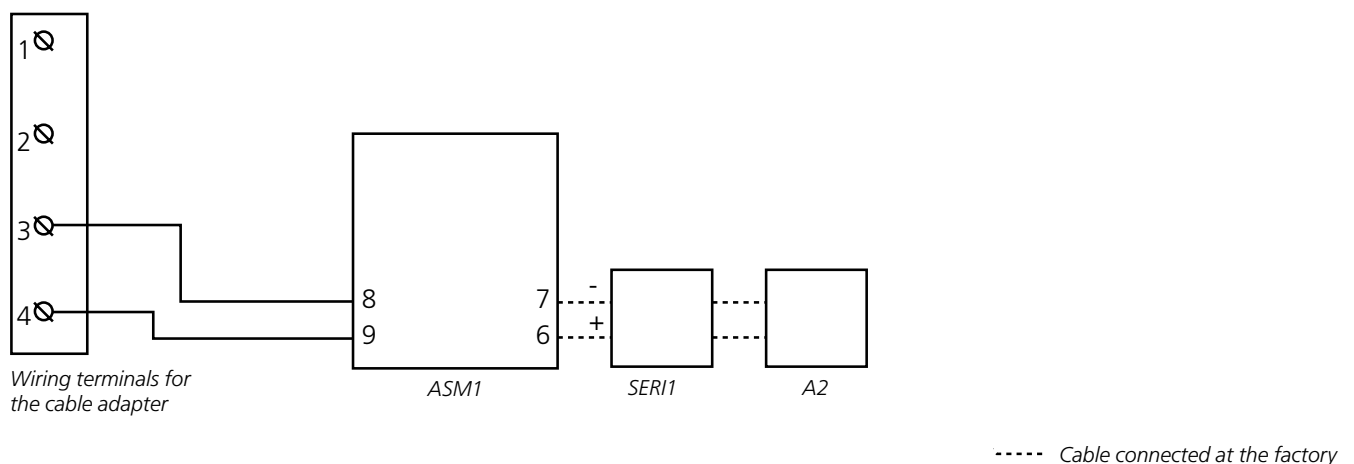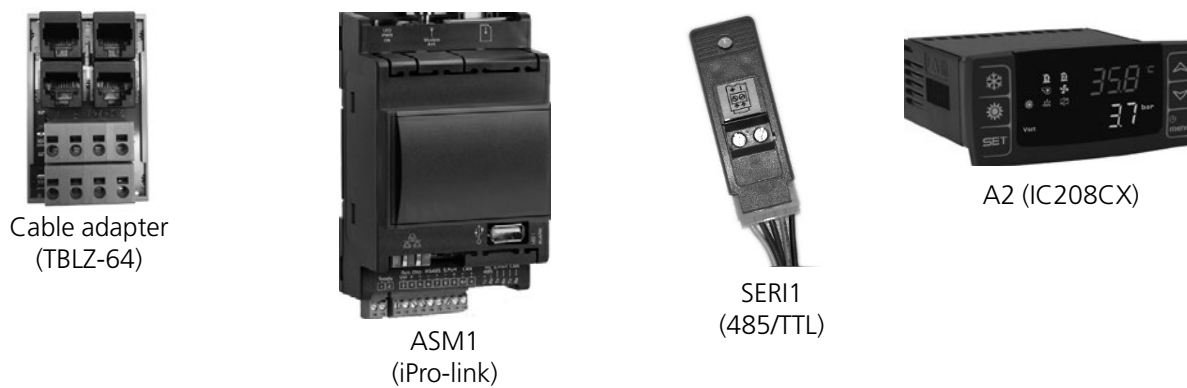


7 Connection via external A2 communications interface (RS485 slave)



Cable adapter
(TBLZ-64)

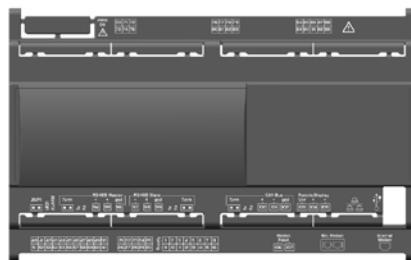


A2 (RS485 slave)

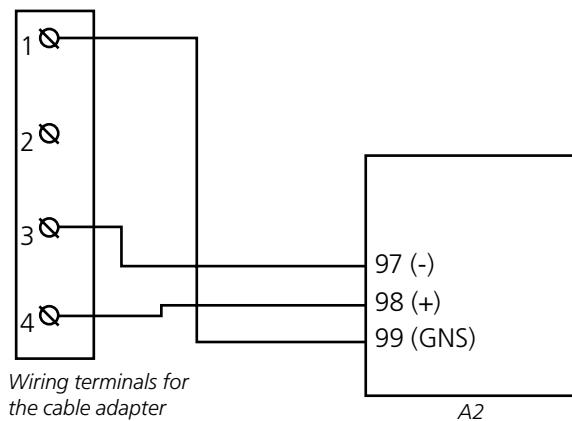

8 CONNECTION TO ETHERNET

ETHERNET TCP/IP

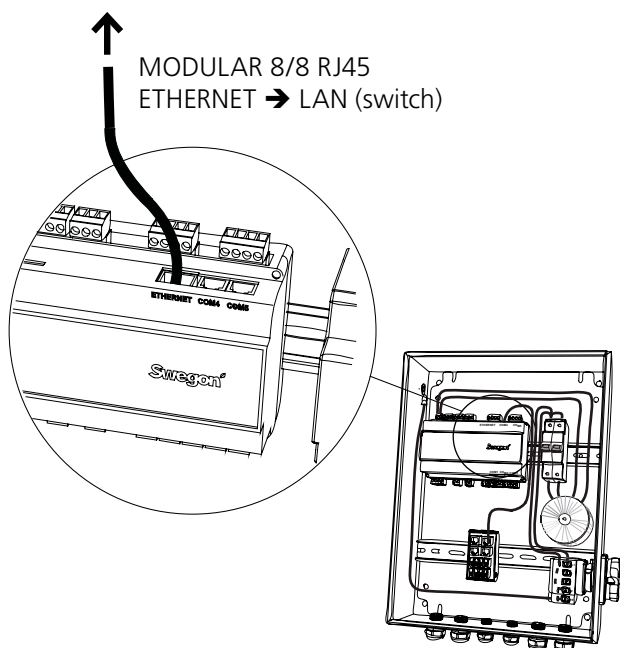

9 CONNECTION TO 230 V

