

To increase the temperature



1. Press ▲ Up until the desired temperature is shown.



2. Press OK or wait 3 seconds.

To decrease the temperature



1. Press ▼ Down until the desired temperature is shown.



2. Press OK or wait 3 seconds.

Symbols



= Heating.



= Occupancy.



= Cooling.

AUTO = Automatic operating mode.



= Fully charged battery.

ECON = Economy operating mode.



= Half-charged battery.

STOP = Standby mode.



= Empty battery.

EMERG = Emergency mode.



= Open window.

Energy saving

The system includes the ECON operating mode for saving energy. It is automatically activated when no one has been in the room for a certain period of time.

CONDUCTOR W1 returns to the AUTO operating mode as soon as someone enters the room. Require occupancy sensor.

Contact and information

Get in touch with the person responsible for the building if the indoor climate system does not operate as it should or if the battery has run out of power.

Information about the CONDUCTOR W1 and how to contact Swegon is available at our website: www.swegon.com

Symboler

	= Värme.		= Närvaro.
	= Kyla.		= CO ₂ -halten har överstigit den förinställda.
	= Fullt batteri.	AUTO	= Driftläge Automatiskt.
	= Halvfullt batteri.	ECON	= Driftläge Ekonomi.
	= Tomt batteri.	STOP	= Driftläge Standby.
	= Öppet fönster.	EMERG	= Driftläge Nödläge.
	= Lågt luftflöde.		
	= Normalt luftflöde.		
	= Högt luftflöde.		

Energispar

För att spara energi finns driftläget ECON. Det aktiveras automatiskt när ingen har befunnit sig i rummet under en viss tid. CONDUCTOR W4 övergår till driftläge AUTO så snart någon kommer in i rummet igen.

Kontakt och information

Kontakta den som är ansvarig för fastigheten om klimatsystemet inte fungerar som det ska eller om batteriet är slut.

Information om CONDUCTOR W4 samt kontaktuppgifter till Swegon finns på www.swegon.se